





Installation


Installation is fast and easy thanks to the unique click lock system. Click Lock Technology works perfectly for both the long and short sides of the flooring panel and ensures there are no unwanted gaps or spaces between floorboards.

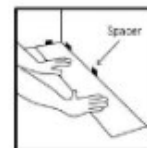


Start at a corner, tongue side facing wall, with spacers for an 8-12 mm expansion gap.

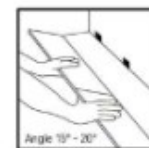


Assemble the second row on the subfloor, tilt and push to attach to the first row, then click into place.

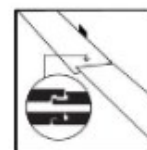


Insert the second plank's end tongue into the first plank's end groove at an angle, then click into place.

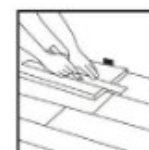


Begin the next row with the last cut-off piece from the previous row.

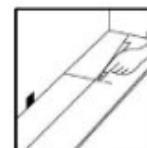

For the last plank of a row, measure, mark, score, and snap off the required length, then insert.

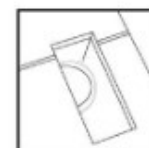

For heating vents, cut the plank to length, measure and mark areas to cut out, then cut allowing for expansion.

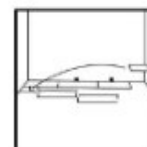

Begin the next row with the last cut-off piece from the previous row.



Trim door frames by placing a plank upside down next to the frame and cutting to the necessary height.



Scan for more information